

#### **F06 Select ring tone (7 kinds)**

Under "F06", press "SEL" or "NEXT" to choose the ring tone. Then press "ENT" to save the setting, press "FUN" to exit.

#### **F07 Display mode setting (Default setting:2)**

- 1) Display the last call
- 2) Display according to the call sequence

Under F07,press"ENT" then "NEXT" to choose"1"or "2".Press "ENT"to save the setting,press "FUN" to exit

#### **F08 Auto canceling time (from 0s-60s)**

- 1) Under "F08", Press "ENT", it will show the auto canceling time, The default setting is 00, means the number will not be cancelled automatically. It should be cancelled manually.
- 2) Press "SEL" and "NEXT" to adjust the number from "00" to "60".
- 3) Press "ENT" to save the setting, press "FUN" to exit

#### **F09 Restore manufacture settings**

- 1) Under "F09", device shows "000"
- 2) Press "SEL" and "NEXT" to adjust the number of position B to "000" Press "ENT" position B will show "000" to "999" then the device sounds "di, di", means the operation is success.
- 3) Press "FUN" to exit

**Note:** manufacture settings: Save transmitter----0      Remind mode----ring tone  
Rolling display time----00s      Auto canceling time----00s

### **III. Other instruction**

**Receive calling:** If choose Chinese voice remind mode, the device will show the calling number and call the number in Chinese speech after playing a ring tone. If choose ring tone remind mode, the device will show the calling number and play the ring tone 3 times.

**There are 3 lights indicate different service types:** \* Call; : Water; ; Bill

**Query calls:** under working status, press "SEL" or "NEXT" key to query the last 30 calls.

**Delete calls:** under working status, press "ENT" to delete the calling number.

### **IV. Technical specification**

Model number: Y-128E-A	Dimension :535×158×40mm
Working voltage: 12V DC	Working current: 150MA
Frequency: 433.92Mhz±75k	Audio output : 1w
Sensitivity :106dB	

 **Y-128E/433-A**


# **User Manual for Receiver**

# I . System Instruction

## 1. Features

- Can work with 256pcs 1-key or 3-key transmitters in max
- Show 3 digit numbers from 000 to 999
- Can rolling display the last 30 calls
- Indicate different service types with indicator lights
- Ring tone and volume are adjustable

## 2.Sketch

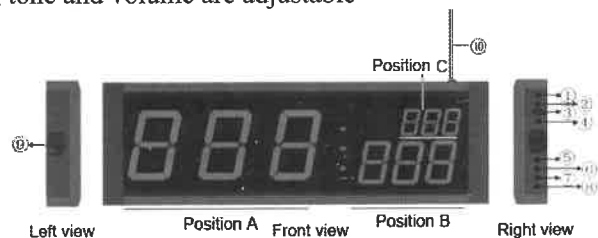

- ① Power ② Audio output ③ Flashing light ④ Volume adjust ⑤ FUN: function key  
⑥ SEL: digit select ⑦ NEXT: digit adjust ⑧ ENT: confirm ⑨ Speaker ⑩ Antenna

### Under setting status:

- ENT: confirm the setting  
SEL: select the digit  
NEXT: Adjust the digit (from 0~9)  
FUN: enter/exit setting

### Under working status

- SEL: query last calling record (query the last 30 calls)  
NEXT: query next calling record (query the last 30 calls)  
ENT: cancel the calling

# II . System setting

## 1.Brief instruction

- |     |  |
|-----|--|
| F01 | Save transmitter                         |
| F02 | Delete transmitter                       |
| F03 | Time setting                             |
| F04 | Rolling display time (from 0s-20s)       |
| F05 | Remind mode (Chinese voice or ring tone) |
| F06 | Select ring tone (7 kinds)               |
| F07 | Display mode choice                      |
| F08 | Auto canceling time (from 0s-60s)        |
| F09 | Restore manufacture settings             |

**Enter setting:** Under standby status, press “FUN”, receiver sounds “di” and shows “F01”, and the last digit “1” flickers. Press “NEXT” to adjust the number (1-9), then press “ENT” to enter the relevant function setting.

**Exit setting:** Under main menu status, press “FUN” to return to standby status, the receiver

shows current time.

**Cancel operation:** Under setting status, press “FUN” to return the main menu.

**Note:** During the setting, when press “ENT”, the receiver will prompt setting failed if the parameter is out of the setting range.

Operation success: 2 short sounds of “di, di”

Operation fail: 2 long sounds of “di, di”

## 2. Detail instruction

**Power on:** Power on the device, the screen will show “000” ~“999”, then show the current time.

**F01 Save transmitter** (can save 256pcs of transmitters in max, number from “000” to “999”)

- 1) Press “FUN” key, position A shows F01.
- 2) Press “ENT” key, the device sounds “di” and position B shows 001.
- 3) Press “SEL” and “NEXT” to adjust the number of position B, then press “ENT”, position C shows “---” (number saving progress bar)
- 4) Press any key on the transmitter for 2s, the device sounds “di, di”, and position B shows next number, the operation is success.

**Note:** a. Two 1-key transmitters can be set one call number for call and cancel  
b. if one transmitter has been save into the device before, the old number will be covered when saving a new number, and the old can save other transmitters.

### F02 Delete transmitter

Under “F02”, press “ENT”, position B shows “001”

- 1) Delete single transmitter

Press “SEL” and “NEXT” to adjust the number of position B, press “ENT”, the device sounds “di, di” and show the next number, the transmitter is deleted.

- 2) Delete all the transmitters

Press “SEL” and “NEXT” to adjust the number of position B to “000”, press “ENT”, position B will show “000” to “999” then the device sounds “di, di”, and show “000” again, all the transmitters are been deleted. (press “FUN” to exit)

### F03 Time setting

Under “F03”, press “SEL” and “NEXT” to adjust the time. Then press “ENT” to save the setting, press “FUN” to exit.

### F04 Rolling display time (0s-20s)

- 1) Under “F04”, Press “ENT”, it will show the current rolling display time, The default setting is 00, means not rolling display
- 2) Press “SEL” and “NEXT” to adjust the number from “00” to “20”. For example, set “05”, after the setting is success, the number will rolling display one by one every 5s.
- 3) Press “ENT” to save the setting, press “FUN” to exit

### F05 Remind mode (Chinese voice or ring tone)

Under “F05”, press “SEL” and “NEXT” to choose “1” or “2”. Then press “ENT” to save the setting, press “FUN” to exit.

1 ----- Chinese voice

2 ----- Ring tone (default setting)